



Coolpix S01 Screen Cover Replacement

Follow these 4, easy-to-do steps to replace your screencover in a matter of minutes! Use the photos to guide you to replacing your screen cover.

Written By: angelica fitzgerald



INTRODUCTION

Broken screen, cracked screen, no screen? No problem! If you own a Nikon Coolpix digital camera and are experiencing a screen cover problem, this guide will surely help.



TOOLS:



- [iFixit Opening Tools](#) (1)
 - [Precision Tweezers Set](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
-

Step 1 — Screen Cover




- First make sure the camera is powered off.
- Use the Hex and PH000 tool to remove the 2 mm screw from the left side of the camera.

Step 2

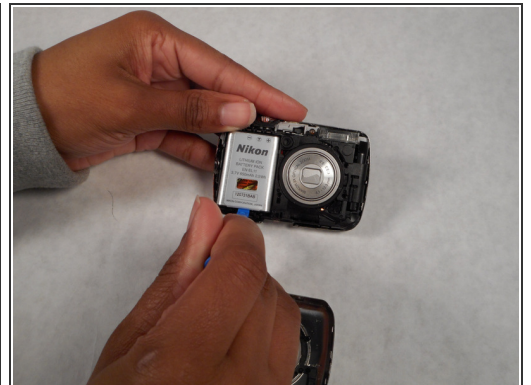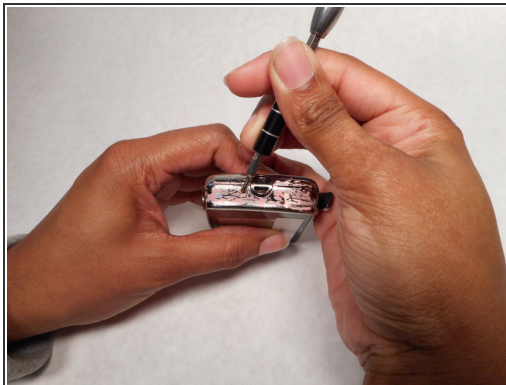


- Next, remove the 2 mm screw from the right side of the camera
- Remove the 3mm screw from the bottom of the camera.
- Once you have the 2mm and 3mm screws out, gently pull the sides up with the smallest plastic opening tool. This will reveal the inside of the camera.
- Be sure to remove the battery before continuing your repair.

Step 3

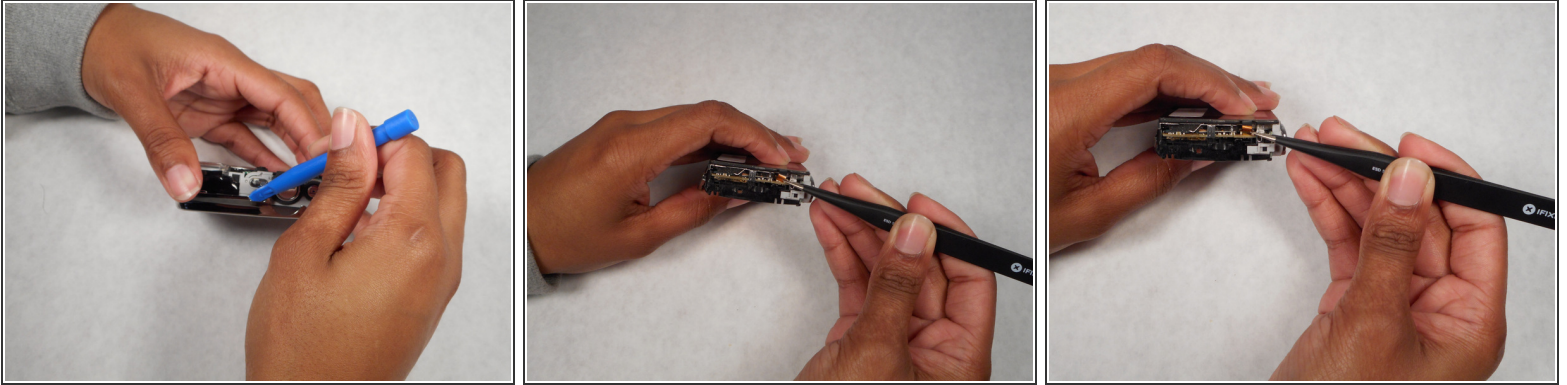

- With the screen facing outward, locate the orange ribbon cable from the motherboard.
- With the straight tweezers, gently pull out the orange ribbon cable from the motherboard.

Step 4

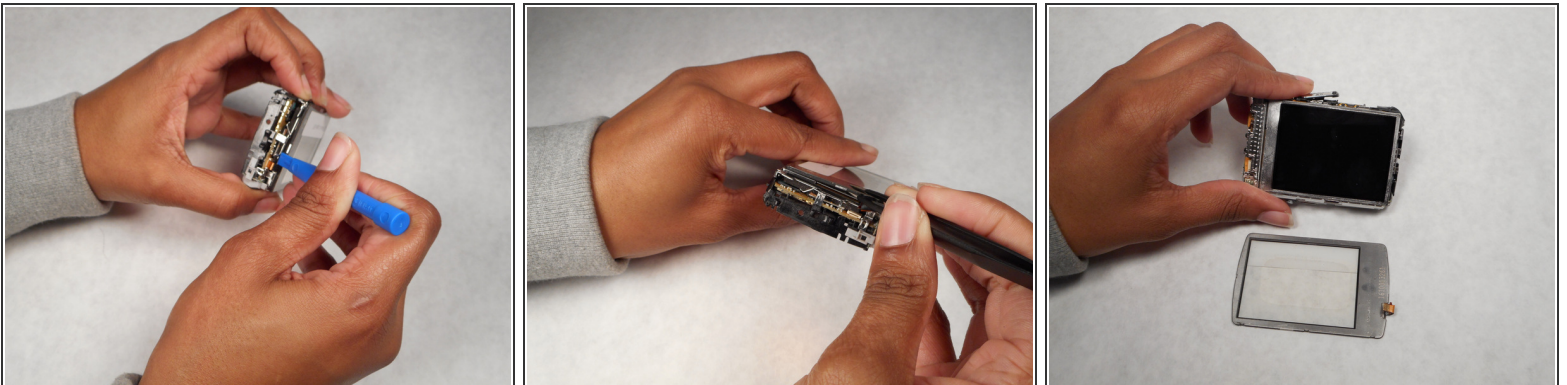

- With the lens facing down and the bottom of the camera facing away from you, lift up the right edge of the LCD screen.
- Use the plastic tool to gently lift the screen out from the upper left corner until the seal is broken.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-25 07:38:56 PM.